



APP CRS	Rwy Idg	5000
237°	TDZE	302
	Apt Elev	302

RNAV (GPS) RWY 24

WOODWARD FLD (CDN)

▼ ▲ NA	When local altimeter setting not received, use Columbia altimeter setting and increase all MDAs 100 feet; increase LNAV and Circling visibility Cats C/D ¼ SM. DME/DME RNP-0.3 NA. Visibility reduction by helicopters NA.	MISSED APPROACH: Climbing left turn to 3000 direct IBAYE and hold.
--	--	--

AWOS-3 119.975	SHAW APP CON ★ 125.4 318.1	UNICOM 123.0 (CTAF) ①
-------------------	-------------------------------	--------------------------

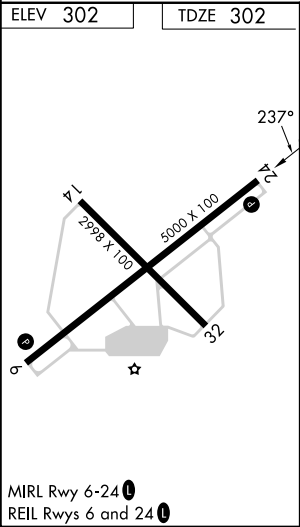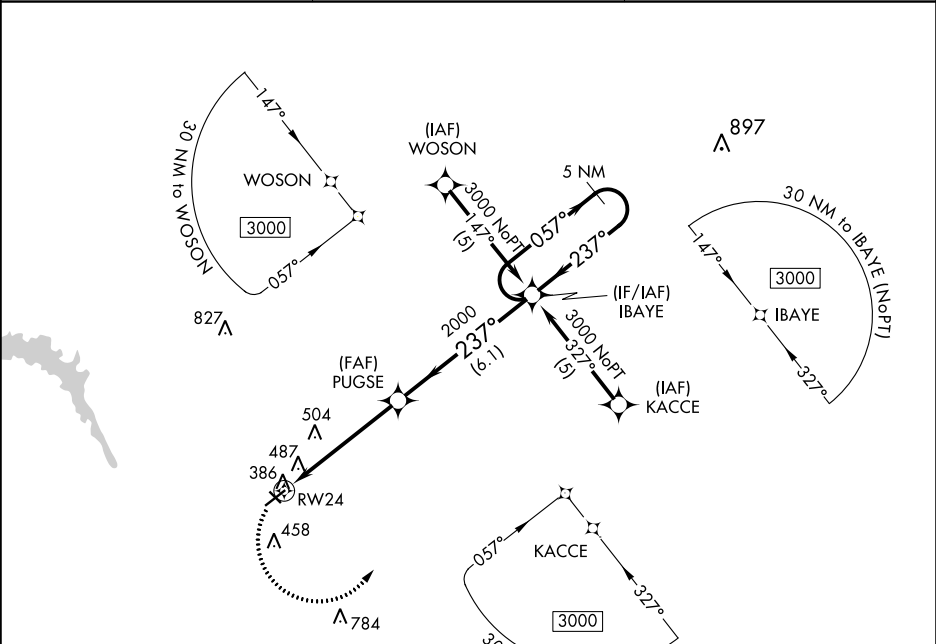

3000 IBAYE 5 NM Holding Pattern				
RW24 PUGSE IBAYE 3000 2000 3.04° TCH 30 5.2 NM 6.1 NM				
CATEGORY	A	B	C	D
LNAV MDA	800-1	498 (500-1)	800-1¼ 498 (500-1¼)	800-1½ 498 (500-1½)
CIRCLING	840-1	538 (600-1)	840-1½ 538 (600-1½)	900-2 598 (600-2)

VOR/DME CTF	APP CRS	Rwy Idg	N/A
114.55	216°	TDZE	N/A
Chan 92(Y)		Apt Elev	302

VOR/DME-A
WOODWARD FLD (CDN)

T When local altimeter setting not received, use Columbia
A altimeter setting and increase all MDAs 100 feet and
NA Circling visibility Cats C/D ¼ SM.

MISSED APPROACH: Climbing left turn to 2000 via CTF VOR/DME R-216 to JEENS/21 DME and hold.

AWOS-3 119.975	SHAW APP CON ★ 125.4 318.1	UNICOM 123.0 (CTAF) 0
--------------------------	--------------------------------------	---------------------------------

